## Setup Guide for ASUS RT-AC66u Router (UFB)

- Login in to the modem using the default Gateway (192.168.1.1)
- From the left menu click on WAN



• Please change the settings to match the ones below

Basic Config	
WAN Connection Type	Automatic IP V
Enable WAN	O Yes ● No
Enable NAT	O Yes ● No
Enable UPnP <u>UPnP FAQ</u>	O Yes ● No
WAN DNS Setting	
Connect to DNS Server automatically	O Yes ● No
Account Setting	
Authentication	None •
Special Requirement from ISP	
Host Name	
MAC Address	MAC Clone
DHCP query frequency	Aggressive Mode ▼
Apply	

• Leave the rest of the settings at their defaults and click Apply

• Next, Click LAN in the left hand menu



- Then click IPTV in the top of the page
- Configure the settings as per the below, then click apply.

LAN IP DHCP Server Route IPT	V Switch Control	
LAN - IPTV		
Configure the IPTV setting of RT-AC66U.		
Port		
Select ISP Profile	Manual v	
Internet	VID 10 PRIO 0	
LAN port 4	VID PRIO 0	
LAN port 3	VID PRIO 0	
Special Applications		
Use DHCP routes	Disable 🔹	
Enable multicast routing (IGMP Proxy)	Disable <b>•</b>	
Enable efficient multicast forwarding (IGMP Snooping)	Disable 🔻	
UDP Proxy(Udpxy)	0	
	Apply	

• The customer may need to wait up to 10 minutes for their modem to re-authenticate, but should then come online with the correct settings.